


If you need to repair that faulty upvc door lock mechanism we have a vast range of replacement upvc multipoint locks and **upvc door locks**. If your Upvc door lock is broken and needs repairing we have the parts to replace your upvc door lock

**How To Measure a Multipoint Door Lock:**

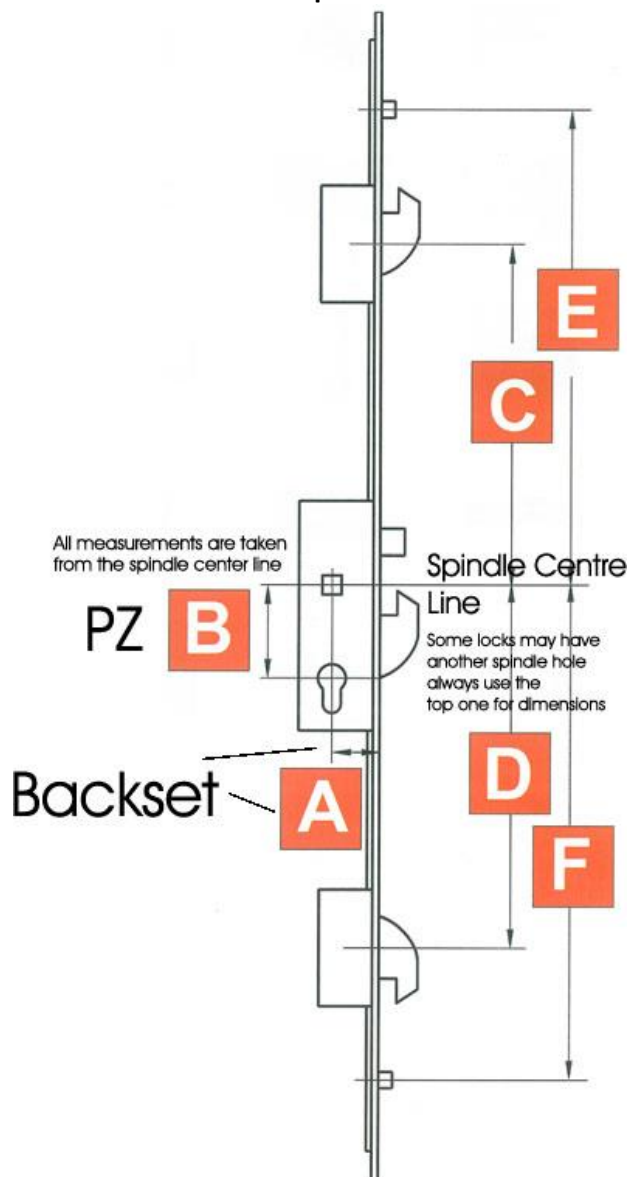

**A. Backset** – The distance from the front of the faceplate to the centre of the euro hole cut out.  
**B. Centres** – the distance from the centre of the spindle to the centre of the euro hole cut out.  
**C, D, E, F: Locking point distances** – Measure the distance of each locking point to the centre of the spindle. Measurements are taken to the middle of the locking point but allow 5-10mm for accuracy and depending on weather the locking points are fully engaged.

**Locking points:**

Note which locking points your lock has and the order they are fixed to the strip, each type of locking point is shown below.

